## Honeywell

# Model 43

## Precision Low Profile Load Cell



### **DESCRIPTION**

Model 43 is a low profile "pancake" type load cells. These bonded foil, strain gage load cells are engineered to measure loads from 5 lb to 500,000 lb. The compression-only Model 43 has a load button which is fixed as an integral part of the load cell and cannot be removed or changed. It provides high performance in non-linearity, hysteresis, and repeatability specifications for such

applications as tube mills, extruding processes and weighing. Each unit has a welded construction and can be hermetically sealed for added durability. Model 43 is available with optional 0 Vdc to 5 Vdc or 4 mA to 20 mA output.



### **FEATURES**

- 0.10 % accuracy
- 5 lb to 500000 lb
- mV/V output (standard); 0 Vdc to 5 Vdc or 4 mA to 20 mA (optional)
- Stainless steel
- Double diaphragm design

## Model 43

### PERFORMANCE SPECIFICATIONS

Characteristic	Measure
Load ranges <sup>9</sup>	5 lb to 500000 lb
Non-linearity, 5 lb to 25 lb	±0.2 % full scale
Hysteresis, 50 lb to 500000 lb	±0.1 % full scale
Hysteresis, 5 lb to 25 lb	±0.1 % full scale
Hysteresis, 50 lb to 500000 lb	±0.08 % full scale
Non-repeatability, 5 to 25 lb	±0.1 % full scale
Non-repeatability, 50 lb to 500000 lb	±0.03 % full scale
Output (tolerance), 5 lb to 25 lb	2 mV/V ±0.5 % full scale
Output (tolerance), 50 lb to 500000 lb	3 mV/V ±0.5 % full scale
Operation	Compression
Resolution	Infinite
Standard calibration	5-point calibration, compression only

### **ENVIRONMENTAL SPECIFICATIONS**

Characteristic	Measure
Temperature, operating	-54 °C to 121 °C [-65 °F to 250 °F]
Temperature, compensated	15 °C to 71 °C [60 °F to 160 °F]
Temperature effect, zero	0.002 % full scale/°F
Temperature effect, span	0.002 % full scale/°F

### **ELECTRICAL SPECIFICATIONS**

Characteristic	Measure				
Strain gage type	Bonded foil				
Excitation (calibration)	10 Vdc				
Excitation (acceptable)	Up to 15 Vdc or Vac				
Insulation resistance	5000 mOhm @ 50 Vdc				
Bridge resistance (tolerance)	350 ohm (nominal)				
Zero balance (tolerance)	±1 % full scale				
Shunt calibration data	Included				
Electrical termination (std) 5 lb to 5000 lb	PTIH-10-6P				
Electrical termination (std) 7500 lb to 500000 lb	MS3102E-14S-6P				
Mating connector 5 lb to 5000 lb (not incl.)	PT06A-10-6S or equiv. (AA111)				
Mating connector 7500 to 500000 lb (not incl.)	MS3106A-14S-6S (AA121)				

### **MECHANICAL SPECIFICATIONS**

Characteristic	Measure
Maximum allowable load	150 % FS <sup>2</sup>
Weight	See table
Material Less than 200,000 lb	17-4PH stainless steel
Material greater than or equal to 300000 lb	Carbon steel
Deflection	See table
Natural frequency	See table

### **RANGE CODES**

Range Code	Available ranges	Range Code	Available ranges
AT	5 lb	DV	10000 lb
AV	10 lb	EJ	15000 lb
BL	25 lb	EL	20000 lb
BN	50 lb	EN	30000 lb
BR	100 lb	EP	50000 lb
CN	250 lb	ER	75000 lb
CR	500 lb	ET	100000 lb
CV	1000 lb	FJ	150000 lb
DL	2000 lb	FL	200000 lb
DN	3000 lb	FN	300000 lb
DP	4000 lb	FP	400000 lb
DR	5000 lb	FR	500000 lb
DT	7500 lb		

### **DEFLECTIONS AND RINGING FREQUENCIES**

Capacity (lb)	Deflection @ full scale (in)	Natural ringing frequency (Hz)	Weight kg (lb)
5 to 25	0.001	2000	0.36 [0.8]
50 to 1000	0.002	4500	0.68 [1.5]
2000 to 5000	0.002	11000	0.73 [1.6]
7500 to 30000	0.003	9000	2.90 [6.4]
50000 to 100000	0.004	13000	2.99 [6.6]
150000 to 200000	0.004	11000	5.31 [11.7]
300000	0.005	10000	10.8 [23.8]
400000	0.007	8400	12.02 [26.5]
500000	0.007	4800	41.00 [90.4]

## Precision Low Profile Load Cell

### **INTERNAL AMPLIFIERS**

Amplifier specifications			Voltage out- put: Option 2t	Current three- wire: Option 2j	Current two- wire: Option 2k	Intrinsically safe amp: Option 2n (2N)***	
Output signal	0 V to 5 V	0 V to 5 V or ±5 V @ 45 mA	0 V to 10 V or ±10 V @ 45 mA	4 mA to 20 mA	4 mA to 20 mA	4 mA to 20 mA	
Input power (voltage)	±15 V or 26 Vdc to 32 Vdc	11 Vdc to 28 Vdc	15 Vdc to 28 Vdc	22 Vdc to 32 Vdc	15 Vdc to 40 Vdc	9 Vdc to 28 Vdc	
Input power (current)	45 mA	40 mA	40 mA	65 mA	4 mA to 28 mA	4 mA to 24 mA	
Freq. resp (amp)	3000 Hz	3000 Hz	3000 Hz	2500 Hz	300 Hz	2000 Hz	
Power supply rej.	60 db	60 db	60 db	60 db	60 db	60 db	
Operating temp.	-20 °F to 185 °F	-20 °F to 185 °F	-20 °F to 185 °F	0 °F to 185 °F	0 °F to 185 °F	-20 °F to 185 °F	
Reverse voltage protection Yes Yes		Yes	Yes	Yes	Yes	Yes	
Short cir. protection	Short cir. protection Momentary Momentary		Momentary	Yes	Yes	Yes	
Wiring code: connector (std) <sup>4</sup>			A (+) Supply B Output common** C Supply return** D (+) Output E Shunt cal 1 F Shunt cal 2	A (+) Supply B Output common** C Supply return** D (+) Output E Shunt cal 1 F Shunt cal 2	A (+) Supply B No connection C No connection D (+) Output E Case ground F No connection	A (+) Supply B No connection C No connection D (+) Output E Case ground F No connection	
· · · · · · · · · · · · · · · · · · ·		BI Output common* G Supply return* W (+) Output B Shunt cal 1	R (+) Supply Bl Output common* G Supply return* W (+) Output B Shunt cal 1 Br Shunt cal 2	R (+) Supply Bl Output common* G Supply return* W (+) Output B Shunt cal 1 Br Shunt cal 2	R (+) Supply Bl (+) Output W Case ground	R (+) Supply BI (+) Output W Case ground	

<sup>\*</sup> Black and green wires are internally connected.

### **ALLOWABLE MAXIMUM LOADS<sup>2</sup>**

Capacity (lb)	Side load (lb)	Bending (lb-in)	Torque (lb-ft)	
5 to 25	50 %	40 %	25 %	
50 to 1000	45 %	35 %	25 %	
2000 to 5000	30 %	25 %	25 %	
7500 to 30000	20 %	20 %	15 %	
50000 to 100000	20 %	20 %	15 %	
150000 to 200000	20 %	20 %	15 %	
300000	20 %	20 %	10 %	
400000	20 %	20 %	10 %	
500000	20 %	20 %	10 %	

# Axial Torque Bending Side

### **WIRING CODES**

Connector	Unamplified (Std.)
Α	(+) excitation
В	(+) excitation
С	(-) excitation
D	(-) excitation
E	(-) output
F	(+) output

<sup>\*\*</sup> Pins B and C are internally connected.

<sup>\*\*\*</sup> See our Web site (http://measurementsensors.honeywell.com) for the most up-to-date information regarding intrinsically safe approvals, ref. #008-0547-00.

## Model 43

### **OPTION CODES**

	Many range/option combinations are available in our quick-ship and fast-track manufacture programs. Please see http://measurementsensors.honeywell.com for updated listings.						
Load ranges	5, 10, 25, 50, 100, 250, 500, 1000, 2000, 3000, 4000, 5000, 7500, 10000, 15000, 20000, 30000, 50000, 75000, 100000, 150000, 200000, 300000, 400000, 500000 lb						
Temperature compensation	1a. 60 °F to 160 °F 1b. 30 °F to 130 °F 1c. 0 °F to 185 °F 1d20 °F to 130 °F 1e20 °F to 200 °F 1f. 70 °F to 250 °F	1g. 70 °F to 325 °F11 1h. 70 °F to 400 °F11 1i65 °F to 250 °F 1j. 0 °C to 50 °C 1k20 °C to 85 °C 1m25 °C to 110 °C					
Internal amplifiers	2a. Four wire, 0 Vdc to 5 Vdc output 2c. 0 Vdc to 5 Vdc 2j. 4 mA to 20 mA (three-wire) output 2k. 4 mA to 20 mA (two-wire) <sup>10</sup>	2n (2N) 4 mA to 20 mA (two-wire) intrinsically safe <sup>10</sup> 2t. 0 Vdc to 10 Vdc output 2u. Unamplified, mV/V output					
Internal amplifier enhancements	3a. Input/output isolation <sup>7</sup> 3d. Remote buffered shunt calibration <sup>8</sup>						
Electrical termination	<ul> <li>6a. Bendix PTIH-10-6P (or equivalent), 6-pin (max. 250 °F)</li> <li>6b. MS connector MS3102E-14S-6P (mates with MS3106E-14S-6S) (max. 160 °F) (ranges above 5000 lb)<sup>12</sup></li> <li>6e. Integral cable: Teflon</li> </ul>	6f. Integral cable: PVC 6g. Integral cable: Neoprene 6h. Integral cable: Silicone 6i. Integral underwater cable 6j. 1/2-14 conduit fitting with 5 ft of 4 conductor PVC cable					
Shunt calibration	8a. Precision internal resistor <sup>11</sup>						
Special calibration	9a. 10 point (5 up/5 down) 20 % increments @ 70 °F 9b. 20 point (10 up/10 down) 10 % increments @ 70 °F 9c. ASTM E-74 calibration						
Bridge resistance	12. 5000 ohm (foil) (max. 250 °F)						
Bridge type	31a. Dual bridge						
Zero and span adjustment	14a. No access to pots 14b. Top access to pots						
Electrical connector orientation	15a. Horizontal electrical exit port orientation 15b. Vertical electrical exit port orientation 15c. Radial electrical exit port orientation 15d. Connector on end of cable						
Special calibration	30a. Compression only, positive output						
Shock and vibration	44a. Shock and vibration resistance						
Interfaces	53e. Signature calibration <sup>11</sup> 53t. TEDS IEEE 1451.4 module <sup>8</sup>						


# Honeywell

## Precision Low Profile Load Cell

### **MOUNTING DIMENSIONS**

Ranges Ib	D1 mm [in]	D2 mm [in]	H mm [in]	F typ. dia.	ØG mm [in] B.C.	A mm [in]	A* mm [in]	B mm [in]	B* mm [in]	C mm [in]
5, 10, 25	63,5 [2.50]	9,4 [0.37]	24,89 [0.98]	#8	50,8 [2.000]	20,83 [0.82]	63,5 [2.5]	19,05 [0.75]	22,86 [0.9]	31,75 [1.25]
50, 100, 250, 500, 1000	76,2 [3.00] <sup>1</sup>	14,22 [0.56]	29,97 [1.18]	1/4	57,15 [2.250]	20,83 [0.82]	63,5 [2.5]	19,05 [0.75]	22,86 [0.9]	31,75 [1.25]
2000, 3000, 4000, 5000	88,9 [3.50]	17,53 [0.69]	29,97 [1.18]	5/16	66,68 [2.625]	20,83 [0.82]	63,5 [2.5]	19,05 [0.75]	22,86 [0.9]	31,75 [1.25]
7500, 10000, 15000, 20000, 30000	114,3 [4.50]	38,1 [1.50]	50,8 [2.00]	3/8	96,27 [3.790]	31,75 [1.25]	58,42 [2.3]	38,1 [1.50]	38,1 [1.5]	50,8 [2.00]
50000, 75000, 100000	114,3 [4.50]	38,1 [1.50]	50,8 [2.00]	3/8	96,27 [3.790]	31,75 [1.25]	58,42 [2.3]	38,1 [1.50]	38,1 [1.5]	50,8 [2.00]
150000, 200000	139,7 [5.50]	50,8 [2.00]	55,37 [2.18]	3/8	122,22 [4.812]	31,75 [1.25]	58,42 [2.3]	38,1 [1.50]	38,1 [1.5]	50,8 [2.00]
300000	177,8 [7.00]	63,5 [2.50]	68,1 [2.68]	3/8	152,4 [6.00]	31,75 [1.25]	58,42 [2.3]	38,1 [1.50]	38,1 [1.5]	50,8 [2.00]
400000	190,5 [7.50]	63,5 [2.50]	68,1 [2.68]	3/8	171,45 [6.750]	31,75 [1.25]	58,42 [2.3]	38,1 [1.50]	38,1 [1.5]	50,8 [2.00]
500000	279,4 [11.0]	120,65 [4.75]	114,3 [4.50]	3/4	241,3 [9.500]	31,75 [1.25]	58,42 [2.3]	38,1 [1.50]	38,1 [1.5]	50,8 [2.00]

<sup>\*</sup> Length of load cell with amplified option (see option codes)

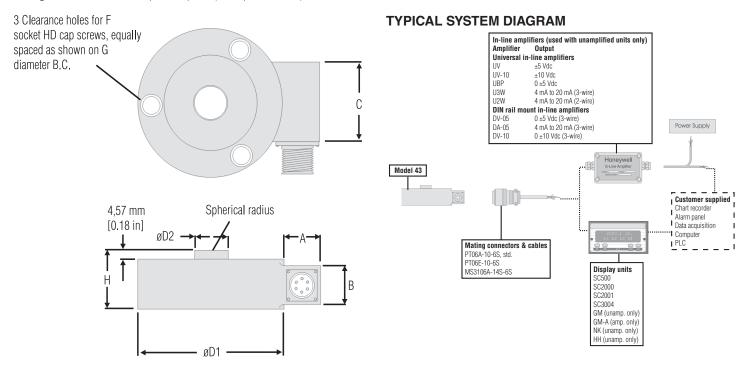

## Model 43

## Precision Low Profile Load Cell

### **NOTES**

- 1. 0.12 mm [3.00 in] diameter has six mounting holes.
- Allowable maximum loads maximum load to be applied without damage.<sup>3</sup>
- Without damage loading to this level will not cause excessive zero shift or performance degradation. The user must consider fatigue life for long term use and structural integrity. All structurally critical applications (overhead loading, etc.) should always be designed with safety redundant load paths.
- 4. Interconnecting shunt cal. 1 terminal with shunt cal. 2 terminal provides 50 % (unamplified units), 75 % (4 mA to 20 mA three-wire units) or 80 % (voltage amplified units) of full scale output for quick calibration. Shunt calibration comes standard with internal amplifier option 2a, 2b, 2c, 2t and 2j.
- O=Orange; Y=Yellow; B=Blue; BI=Black; R=Red; Br=Brown; W=White; G=Green. Color specifying cable and number or letter specifying connector
- No mating connector necessary for cable option.
- 7. Only available with option 2a or 2c.
- 8. Consult factory for TEDS availability with amplified models.
- 9. This unit calibrated to Imperial (non-Metric) units.
- 10. 5000 ohm bridge required.
- 11. Cannot be used with amplified option.
- 12. Cannot be used with options 1c, 1e, 1f, 1g, 1h, or 1i.

Warranty. Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. The foregoing is buyer's sole remedy and is in lieu of all warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

# WARNING PERSONAL INJURY

• DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

## **A** WARNING

### **MISUSE OF DOCUMENTATION**

- The information presented in this datasheet is for reference only. DO NOT USE this document as product installation information.
- Complete installation, operation and maintenance information is provided in the instructions supplied with each product.

Failure to comply with these instructions could result in death or serious injury.

#### Find out more

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office. To learn more about Honeywell's test and measurement products, call +1-614-850-5000, visit http://measurementsensors.honeywell.com, or e-mail inqui-

Sensing and Control Honeywell 1985 Douglas Drive North Golden Valley, MN 55422 USA

www.honeywell.com/sensing

ries to info.tm@honeywell.com

Honeywell