## Slip Ring & Encoder Assembly

## Model SR10M/E60

- 10 circuit slip ring
- 60 pulse encoder
- Slip ring brush lifter
- · Sealed against dust
- Color coded terminals
- Lightweight and compact
- Instrumentation quality rings and brushes
- · Weatherproof units available



## **Description**

The Michigan Scientific SR10M/E60 Slip Ring and Encoder Assembly is used for applications requiring both a slip ring and an encoder. It is designed to mount on the end of a rotating shaft and make electrical connection to strain gages, thermocouples, or other rotating sensors, while simultaneously providing pulses to measure rotational speed. The slip ring brushes and rings are made of precious metals which minimize noise and enable the assemblies to be used for low level instrumentation signals.

The *SR10M/E60* accepts up to 10 circuit connections and incorporates a pulse encoder that enables rotational speed to be measured. The encoder generates a 60 pulse per revolution square wave signal with a range of 0 to 6000 RPM. Since the pulses per second are equivalent to RPM, rotor speed can be recorded directly from a frequency display without scale conversion. Analog output signals for rotational speed can be obtained by using the *SR10M/E60* with Michigan Scientific's frequency to voltage encoder electronics.

This model is also designed with a convenient manually operated brush lifter to extend the life of the slip ring assembly. When it is not necessary to make electrical connection through the slip ring, the brushes can be lifted off the rings. The slip ring will continue to rotate, however, the brushes will not be in contact with the rings and wear will therefore be reduced.

Connections to the slip ring rotor are made through color coded solder terminals located on both the slip ring rotor and slip ring stator. Permanently lubricated bearings eliminate the need for routine cleaning and maintenance.

### **Specifications**

| Circuits  | 10                              |
|---|---------------------------------|
| Current Capacity  | 500 mA                          |
| Temperature Range*  | -40°F to 212°F (-40°C to 100°C) |
| RPM Rating  | 6000                            |
| Maximum Peak Noise**  | 0.1Ω                            |
| Weight  | 7.5 oz. (213 g)                 |
| * Varies with encoder excitation voltage. (see back)          |                                 |
| *For operation below 0°F, specify low temperature lubricant." |                                 |
| ** Resistance variation across slip ring contact.             |                                 |

8500 Ance Road Charlevoix, MI 49720 Tel: 231-547-5511 Fax: 231-547-7070

Rev: 8/27/03


http://www.michsci.com
Email: mscinfo@michsci.com

MICHIGAN SCIENTIFIC


321 East Huron Street Milford, MI 48381 Tel: 248-685-3939 Fax: 248-685-5406


# Slip Ring & Encoder Assembly

### SR10M/E60 Configuration

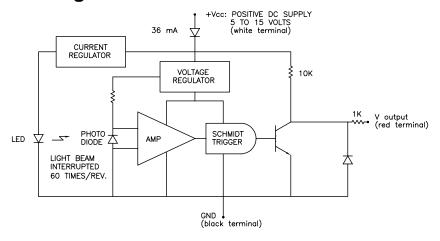

| Vcc                                | MAXIMUM OPERATING TEMPERATURES |
|------------------------------------|--------------------------------|
| 5V                                 | -40°C TO +100°C (212°F)        |
| 10V                                | -40°C TO +80°C (176°F)         |
| 15V                                | -40°C TO +70°C (158°F)         |
| 20V MAX. ALLOWABLE Vcc             |                                |
| +100°C ABSOLUTE MAX. STORAGE TEMP. |                                |



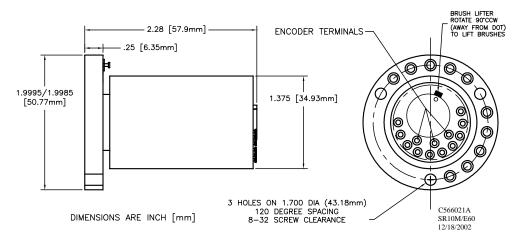

## **Mounting**

The SR10M/E60 can easily be mounted to the end of a shaft. Refer to the literature on SR Series Slip Ring Assemblies for a detailed drawing and description of the mounting procedure.

#### **Ordering Options**

Weatherproof units and accessories are available for applications operating in harsh environmental conditions. For information regarding slip ring accessories, refer to the "Price List and Accessories" section.

8500 Ance Road Charlevoix, MI 49720 Tel: 231-547-5511 Fax: 231-547-7070

http://www.michsci.com

MICHIGAN

SCIENTIFIC corporation

321 East Huron Street Milford, MI 48381 Tel: 248-685-3939 Fax: 248-685-5406